

TS-Pro

THERMAL STRIPPER

TS PRO , LONG-LASTING THERMAL STRIPPER FOR RIBBON FIBER CABLE AND ROLLABLE CABLE

- Simple and Fast Operation
- Rugged Metal Body
- Stable Performance
- Wide Fiber Compatibility
- Power Save Mode

BELIEVE YOUR EYES



PROPER PRESS POINT



Enable stripping with less force and strength closing.

STOPPER STRUCTURE



Strengthen fixing loaded fiber preventing slippery.

SHARPER BLADE




Enable less remaining after stripping and clear cutting line.

DESCRIPTION

TS Pro is developed as a dedicated stripper mainly for ribbon fiber cable and rollable cable with thermal heater. With its simple and fast operation, anyone can do clear stripping with near-zero failure. It is a very stable tool with lightweight material and compact design. With easy hand operation, it provides long lasting battery capacity: approx. 500 times of ribbon fiber cable stripping. TS Pro is waterproof design, meet the requirement of KS waterproof first level.

How to use

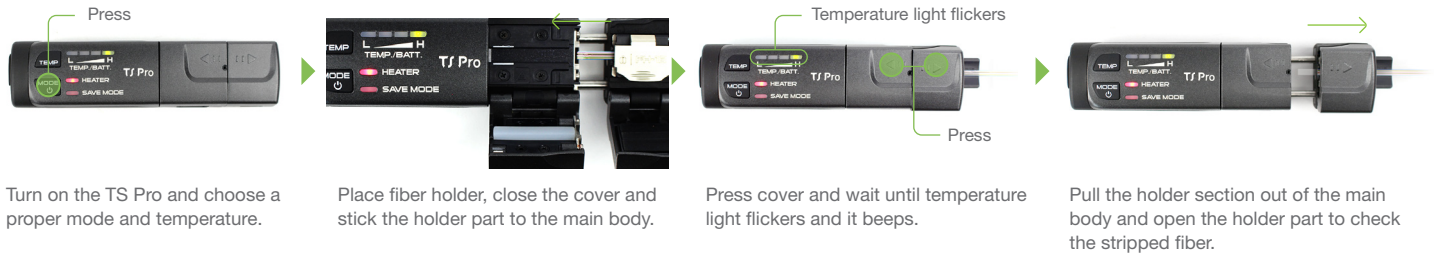

Turn on the TS Pro and choose a proper mode and temperature.

Place fiber holder, close the cover and stick the holder part to the main body.

Press cover and wait until temperature light flickers and it beeps.

Pull the holder section out of the main body and open the holder part to check the stripped fiber.

TECHNICAL SPECIFICATIONS

Items	Specifications
Model	TS Pro
Fiber Material	Silica Glass
Coating Diameter	200 ~ 400 μ m
Cladding Diameter	125 μ m
Applicable Fiber	1 to 16
Stripping Length	Up to 30mm
Heating Mode	Normal Mode / Power Save Mode
Heating Time	Normal Mode: approx. 4sec / Power Save Mode: approx. 5sec
Temperature Setting	Normal Mode: approx. 80°C, 95°C, 110°C, 130°C Power Save Mode: approx. 70°C, 80°C, 95°C, 110°C
Battery Capacity	880mAh, approx. 500 (12 Ribbon fiber, Level 1, SAVE mode)
Power Supply	AC Drive: AC100~240V, 50/60Hz DIN Port: DC 12V power supplied from fusion splicer
Operating Condition	Temperature: 0°C ~ 40°C / Humidity: 0% ~ 95%
Dimensions	139W x 34D x 34H mm
Weight	227g (without battery) / 269g (with battery)

STANDARD PACKAGE

Model / Part No.	Description	
TS Pro	Thermal stripper	1ea
TSC-01	Case	1ea
CB-02	Brush	1ea
JS-1500	Thermal stripper adapter	1ea

OPTIONAL ACCESSORIES

Model / Part No.	Description	
USB-10P	DC power Cable	1ea

SIZE · WEIGHT · PACKAGE



Height: 1.34 inches (34 mm)
Width: 5.47 inches (139 mm)

Depth: 1.33 inches (34 mm)
Weight: 0.59 pounds (269 grams)



TSC-01

TS Pro

JS-1500

CB-02

The Information on this catalog is subject to change without prior notice.